

SHOWER WALL TOUCH-UP KIT

APPLICATION INSTRUCTIONS


BEFORE YOU BEGIN

Before starting, read all instructions and ensure the damaged area is clean, dry, and free of loose material. Work in a well-ventilated area. Protective gloves and safety glasses are recommended.



- Do not look directly into the blue LED curing light or point it at anyone's eyes.
- For **small cosmetic repairs**. Larger damage can remain visible.
- Slight differences in **color, texture, or sheen** may remain after repair.
- For larger damage, contact Customer Care.
- **Shelf Life: 18 months.**

Inside this kit

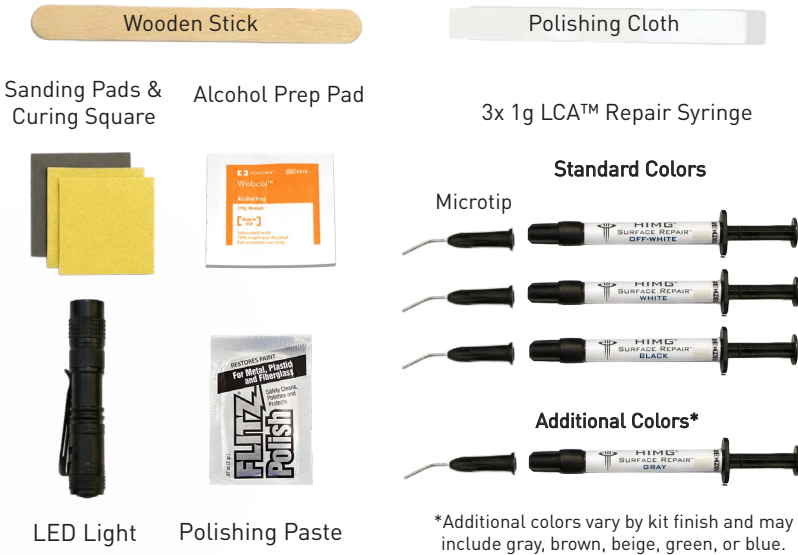

Required, Not Included

* 1 AAA BATTERY NOT INCLUDED (needed for LED Light) *



Prepare the damaged area

Remove any **broken, loose, or raised material** from the damaged area so the repair can bond to a **clean and stable surface**.




Clean the area.

Clean the **damaged area** with the included alcohol prep pad to remove dust, oils, and residue. Allow the surface to **dry completely before proceeding**.



Protect the surrounding surface.

Apply **painter's tape** around the **damaged area**, leaving **only the repair area exposed**. This helps protect the surrounding surface from excess resin.

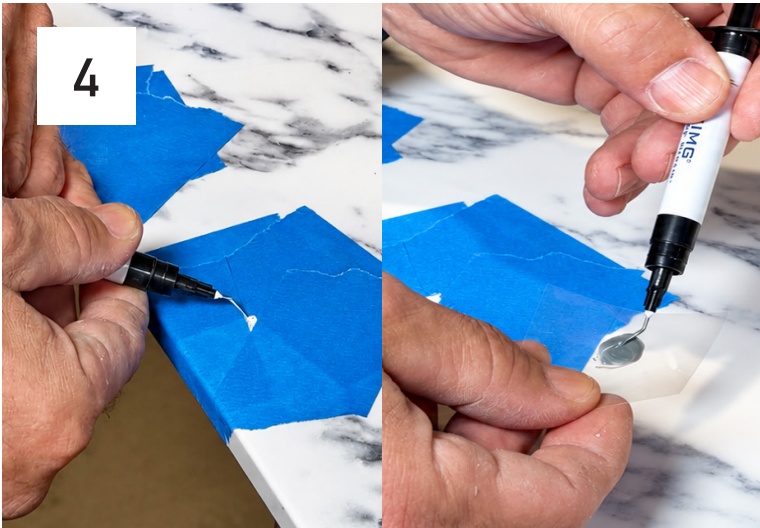

Select or mix the resin color.

Your **kit includes multiple resin colors** for color blending. Attach the micro tip to the syringe. **If the syringe matches, apply it directly.** If **different color is needed**, mix the colors on the curing square until closely matched.



Apply the resin.

Fill the **damaged area with resin** using the micro tip. Avoid overfilling. **Repairs within 3'8"** blend well, **larger repairs may remain visible**. Wipe away excess resin from tape before curing.



Cure the resin.

Hold the **curing square firmly in place** over the repair while positioning the LED light above it. **Cure for 2-4 minutes**. Check repair with the included wooden stick. If the resin is not fully hardened, **continue curing until firm**.



Clean and polish.

Wipe the repaired area clean with a cotton cloth.
For gloss finishes: Apply polishing paste and buff gently.
For satin finishes: Polishing paste is not required.



Shape the repair.

Place the **curing square** over the uncured resin and gently **press to level** or shape the material **and distribute it** evenly within the damaged area.



Sand the repaired area.

After curing, **remove the tape**. If the repair feels tacky, wipe it with rubbing alcohol. **Keep the repaired area wet while sanding** with 1200-grit, then 2000-grit for a smoother finish. **Avoid sanding the surrounding surface**.



Final result.

Your repair is **complete and ready** for use.

Note: Slight color variation may occur due to differences in application and color blending.